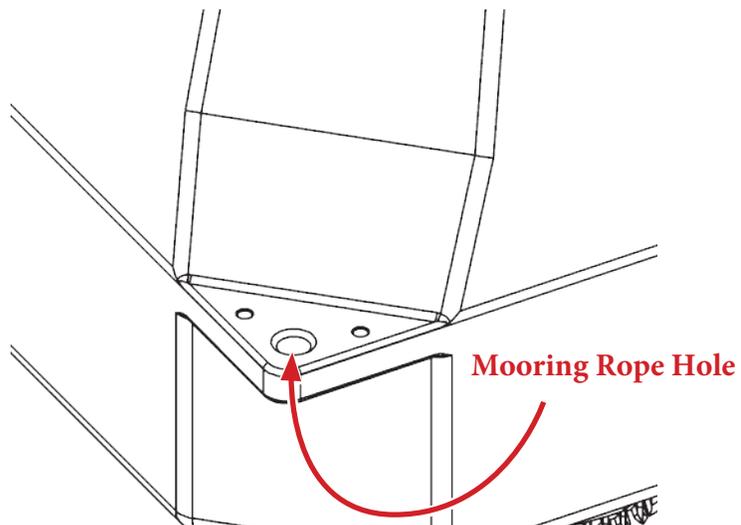# Light Set Installation

Step #1

Fasten mooring rope to the large holes on two opposing sides of the float. Make sure to place the knot on the bottom side of the float as to not interfere with the light bracket.
TWO MOORING LINES REQUIRED

Mooring Rope Hole

Step #2

Mount the light bracket to the float making sure that the power cable is away from the float. Place bracket in the corner using the provided hardware in the two outer holes as shown. Bracket will contour over the mooring rope.

Light Bracket Mounting bolts

Cord Away from Float